Installation Instructions for
Epson Stylus Photo 1500W Continuous Ink System

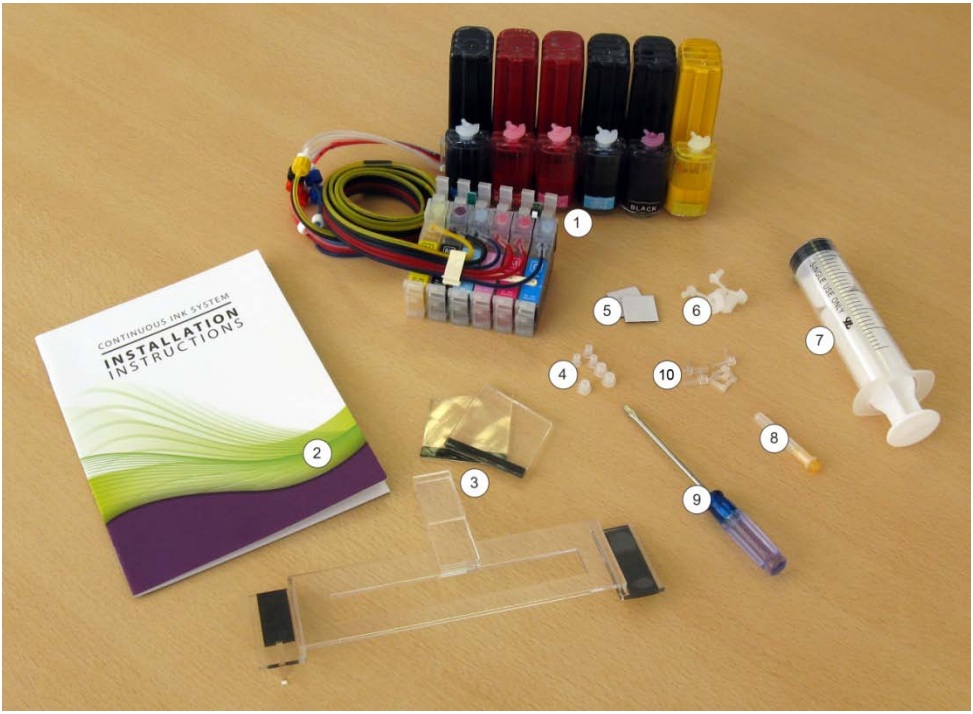

List of Contents

1. Continuous Ink System
2. Installation Manual
3. Tube Support Bracket
4. Spare Grommets
5. Spare Sticky Pads
6. Spare Rubber Seals
7. 60ml Syringe
8. Sharp Needle
9. Screwdriver
10. Spare Plastic Elbows

Power on the printer and press the ink button. When the carriage has moved to the cartridge removal position unplug the mains cable from the printer.

This allows the carriage to be moved manually.

Move the carriage to the left, insert the screwdriver into the hole and raise the screwdriver to lever off the hinge. Remove the cartridge lid.

Remove any cartridges from the machine.

Remove the centre bung from the rubber seal.

BE CAREFUL NOT TO DAMAGE THE SEALS WHEN REMOVING THE CENTRE BUNG

Repeat this for all colours, then place to the right of the printer as shown.

NEVER PLACE THE BOTTLES HIGHER THAN THE LEVEL OF THE PRINT HEAD

Move the carriage to the left hand side of the printer.

Feed the cartridges under the printer housing.

TAKE CARE NOT TO DAMAGE THE CHIP RESETTER

Place the cartridges on the housing whilst you move the carriage back to the cartridge removal position.

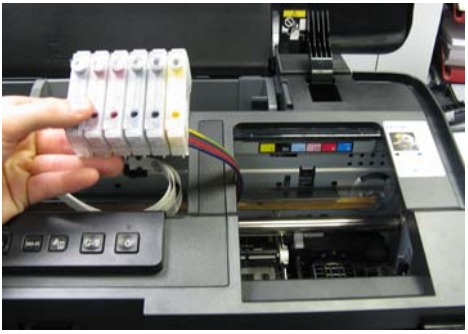

Place the cartridges into the carriage. Press them down firmly by spreading fingers across all the cartridges.

Important:
ENSURE THAT EACH CARTRIDGE HAS CLICKED INTO PLACE.

Remove the backing tape from the sticky pads on the tube support bracket.

Position the bracket around the printer button housing, ensuring the plastic tab fits into the slot.

ENSURE THE SURFACE OF THE PRINTER HOUSING IS CLEAN AND DRY

Place the tubes into the tube support bracket and move the carriage all the way to the left of the printer, remove any slack by adjusting the tubes while in the support bracket.

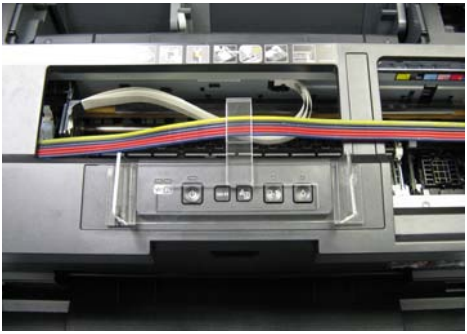

Remove the backing tape from the small support bracket and fit as shown.

ENSURE THE SURFACE OF THE PRINTER HOUSING IS CLEAN AND DRY

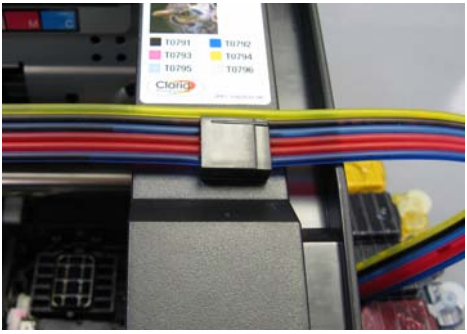

Attach the printer lid support brackets as shown. You can now close the lid.

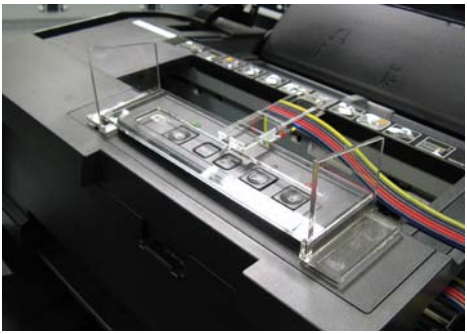

Plug in the mains power cable and power on the printer.

The printer will go through the initial ink charge before your system is ready for use.

If the orange ink light is illuminated when the printer is powered on, press the ink button to move the carriage to the removal position.

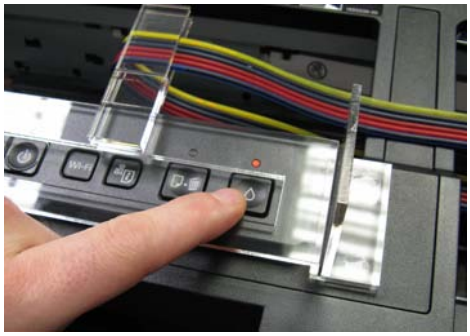

Press and hold the chip reset button for 5 seconds.

Press the ink button and the printer will begin the initial ink charge.

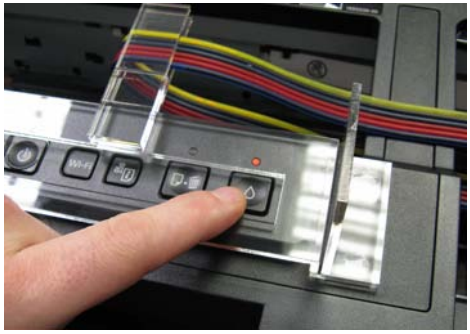

Your system is now ready for use.

Visit www.sawgrasseurope.com/technical-support for further instructions on how to configure your Epson Stylus Photo 1500W for use with sublimation ink:

Setup should be completed in the following order:

1. Sublimation Installation Guide
2. Epson Driver Configuration
3. Printing from your graphics software application.

REFILLING THE BOTTLES

Lay the bottles down and remove the rubber bung from the colour you wish to refill.

Use the syringe and nozzle attachment to fill the colour.

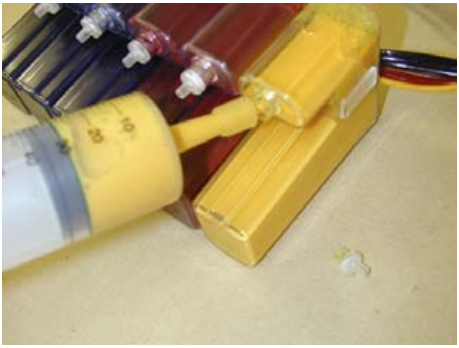

You cannot fill the reservoir further than the hole allows.

Do not stand the system up so you can fill the smaller chamber, this system works on the principle that the smaller chamber is partially empty.

Return the bottles to an upright position and replace the rubber seal ensuring the centre bungs are removed.